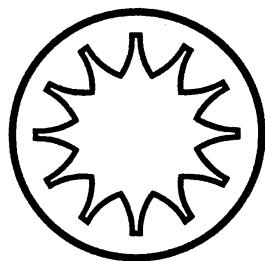
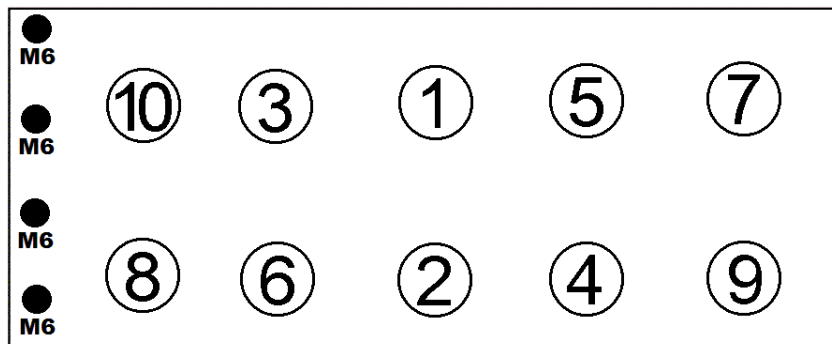


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****915.160**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo323.300
M 10x1,5x115Anziehen/
Tightening/
Serrage/
AprieteM10
40 Nm
> 90°
> 90°M6
4 Nm
90°**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 0,9 mm, Ø 83,3 mm

Mot.: 2,0l TFSI EA888

CUHA CUHB CUJA CWPA CWPB CYYA DBFB DKUA DKUB
DKVA DKVB DKWA DKWB DKWC DKXA DPLA DPMA DTAAA3, A4L, A6L, Q3, Q5L, Lamando, Phideon,
Teramont, Tiguan, Passat, Viloran**Elring-Serviceteam**Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/09/05

915.160